


# TPC-7 Basic Operating Instructions

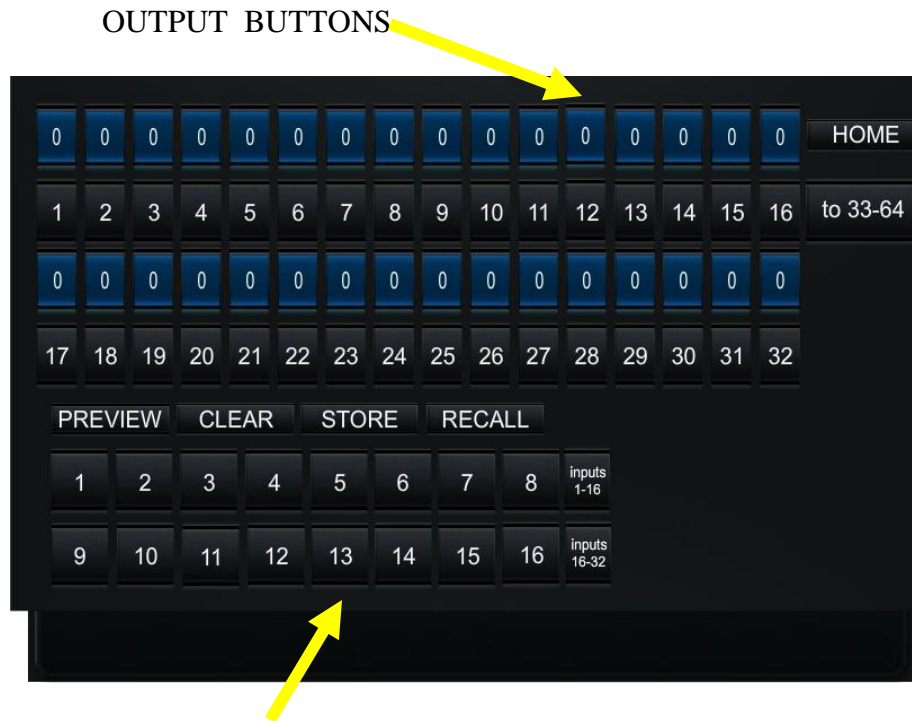

To make a basic route, press an input button, then any number of outputs buttons. This will cause that input to be routed to all those outputs.

In addition the input button that is pressed will automatically be routed to output 64 of the chameleon and hence to the picture in picture display (to enlarge the display simply press the button called "PREVIEW").

Pressing anywhere on the screen will cause the display shrink back to the picture and picture).


You can store up to 16 complete route patterns by simply pressing the button "STORE" then one of the input buttons.

To recall a given pattern simply press the "RECALL" button then the corresponding input button.

To switch off a given output simply press the "CLEAR" button, then the output buttons.

# TPC-7 Basic Operating Instructions

Pressing one of the tabs such as DirectTV will open the DirectTV control page shown below.

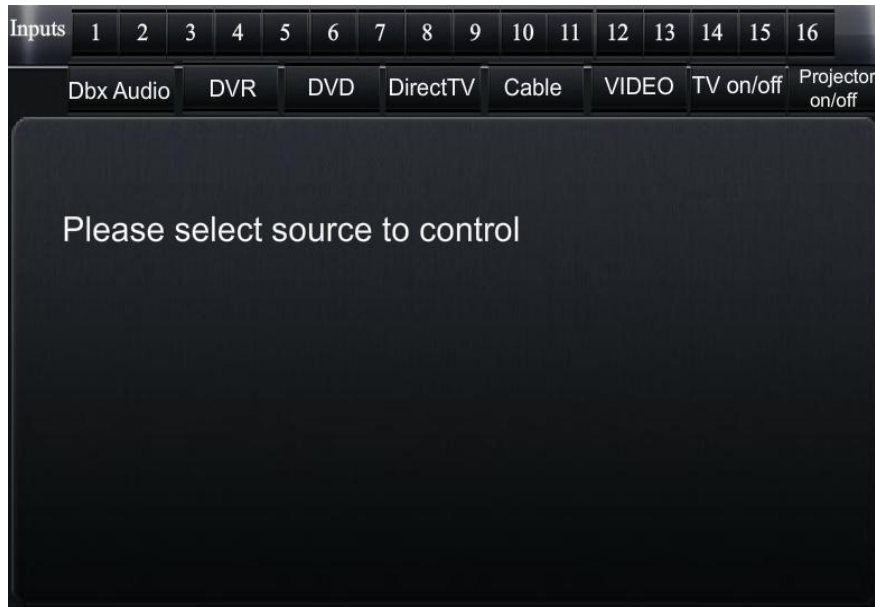

Pressing the button called "HOME" will switch to the IR control page shown below.



Pressing one of the input buttons at top will select which DirectTV receiver to control. Note: in order to control a device you must have an IR expander.