

## Installation of the scaler power supply

On the bottom of the unit there is a cover held on by 4 screws, remove the cover.

You can see the scaler inside, unplug power jack (you have to unscrew it counterclockwise to unlock it). Plug the new power supply into the Jack and then just plug the other end into the racks' power strip.

Don't bother to install the power supply inside the unit.